


Things You Should Know




Pinch Pleat

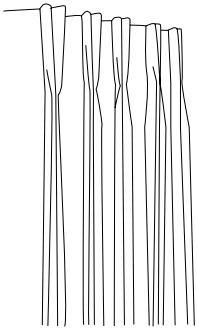

Pinch Pleat curtains are manufactured to the sizes given, they can not be made wider once manufactured. All allowances are made at time of manufacture. Your tracks can be mounted Face or Top Fix. Face Fix tracks are recommended to be mounted above the window by 100mm. Minimum width is 300mm, Maximum width is 4200mm. Hooks are provided with your curtains, ready for installation. Curtains hang best when they are installed according to the instructions provided.

Wavefold

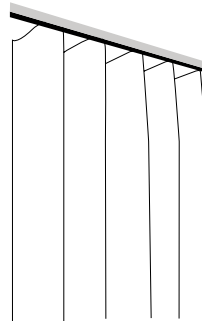

The wavefold curtain is only compatible with the Wavefold track supplied, due to special components used in the track. Your track can be mounted Face or Top Fix. Face Fix tracks are recommended to be mounted above the window by 100mm. All allowances are made at time of manufacture. Minimum width is 300mm, Maximum width is 4200mm. Hooks are provided with your curtains, ready for installation. Curtains hang best when they are installed according to the instructions provided.

How To Measure Pinch Pleat & Wavefold Curtains

We've made it easy to customise your Riva curtains for any window in your house. We recommend using a steel measuring tape for the most accurate measurement (cloth tape should not be used).

Pinch Pleat & Wavefold Curtains

HOW TO MEASURE

Measuring your curtains is simple and easy once a decision has been made where you want your curtain to hang. In order to get the right look and fit for your window, ensure you follow this quick guide to measuring your window.

***NOTE: The width measurement given is what size your track will be and the curtain will be made to suit.**

Installing directly on to your architrave is not recommended.

FACE FIX

Face Fix is where the track/rod is mounted on the face of a wall or window.

Step 1: Measure the width first 'A'. Measure from where you want the curtain to start to where you want to finish on the other side. This measurement can be wider than your actual window.

****Note** It is recommended when deciding where you want your curtain to be that you go past your actual window by 10-15cm each side. If you decide to do this please measure including this.**

Step 2: For height 'B' measure from the desired height to where you want the curtain to finish.

****Note** It is recommended to install tracks or decorator rods above the architrave. Allowances are made by factory so that your finished curtain will be 10-15mm above the height measurement given.**

TOP FIX

Top fix is where the track/rod is mounted to a ceiling or internal structure. The brackets will be fitted directly into the top.



Step 1: Measure the width first 'A'. Measure from where you want the curtain to start to where you want to finish on the other side. This measurement can be wider than your actual window.

****Note** It is recommended when deciding where you want your curtain to be that you go past your actual window by 10-15cm each side. If you decide to do this please measure including this.**

Step 2: For height 'B' measure from the ceiling/internal structure to where you want the curtain to finish.

Allowances are made by factory so that your finished curtain will be 10-15mm above the height measurement given.

***NOTE: For Wavefold Curtains, the curtain hangs from under the track. Therefore, we deduct a total of 35mm from your height measurements given. This allowance covers the depth of the track & 10mm off the height for floor length curtains.**

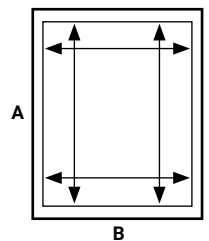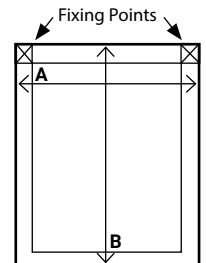


Pinch Pleat- If you do not require a track.

FOR MEASURING AN EXISTING TRACK:

For an existing track which will have Pinch Pleat curtains measure from one end of the track to the other. For the height measure from top of track to where you wish the curtain to finish.

***NOTE: Your curtain will be made to suit the measurement given. All allowances will be made so that your finished curtain will be 10-15mm above that height measurement given.**

IMPORTANT NOTE: Does your track have returns to the wall? If so please include the measurement of the returns in your total width measurement. (See drawing below)



Measure size of returns to wall and add to track width




FOR MEASURING EXISTING DECORATOR RODS:

Step 1: For Pinch Pleat curtains you require a rod with rings on it that the hook can go into.

Measure the width of the rod from inside of one finial to inside of the other finial.

***NOTE: do not include finial width in this measurement. (See below diagram)**



Step 2: For the height measure from the eye of the ring to where you wish the curtain to finish.