



SINGLE ROLLER BLINDS

Blind Sizes Available

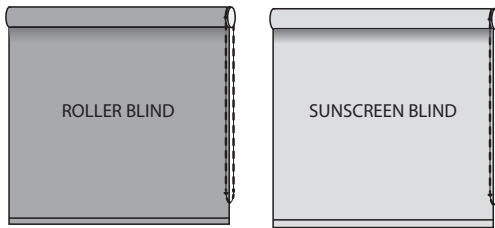

Essentials	Width from 150mm - 2900mm; Drop from 100mm - 3000mm Width from 2901mm - 3000mm; Drop from 100mm - 2700mm
Windsor Blockout and Light Filter	Width from 150mm - 2900mm; Drop from 100mm - 3000mm
Ascot Blockout and Light Filter	Width from 150mm - 2900mm; Drop from 100mm - 3000mm
Tuscany II Blockout and Light Filter	Width from 150mm - 2700mm; Drop from 100mm - 3000mm
Solar Filter 97	Width from 150mm - 2400mm; Drop from 100mm - 3000mm Width from 2401mm - 3000mm; Drop from 100mm - 2300mm

Fabric Roll Direction

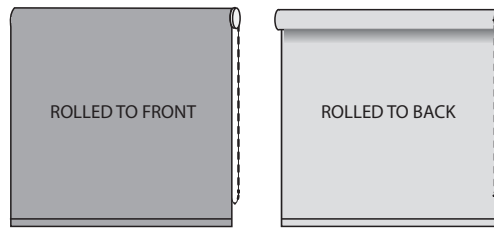

All fabrics as standard, are rolled to the back.

Please note that **Windsor & Tuscany II blockout** have a white backing while **Ascot blockout** has a colour coordinated backing. The backing on these fabrics will be visible wrapped around the tube at the top of the blind when ordered as backed rolled. It is recommended that roller blinds ordered with these fabrics be ordered as front rolled.

For **outside mounting** blinds, rolling to back is recommended so fabric sits closer

to architrave/wall, leaving less light gaps. Some **inside mount applications** may require more clearance due to window locks and other obstructions that protrude from the window, having the fabric direction rolled to the front may be necessary.

Corner windows must be rolled to the front with either mount to avoid a large gap where the two blinds meet.

Light Gap A light gap of approximately 15-20mm between fabric and frame will be present to allow for fittings on each side.

We've made it easy to customise your Riva blinds for any window in your house. We recommend using a steel tape for the most accurate measurement (cloth tape should not be used).

Standard Mounts


INSIDE MOUNTING

For width 'A', measure inside the window frame from one edge to the other at the top and bottom of the window frame (please record both measurements on the order form).

For drop 'B', measure inside the window frame from one edge to the other on both the left and right side of the frame (please record both measurements on the order form).

- Note: A light gap of approximately 15-20mm between fabric & frame will be present to allow for fittings each side.


- A deduction of 3mm is taken from the width of the blind by the factory to ensure that it fits inside the frame.

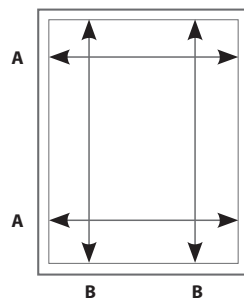

OUTSIDE MOUNTING (with architraves)

For width 'A', measure from one edge of the architrave to the other.


For drop 'B', measure from one edge of the architrave to the other.

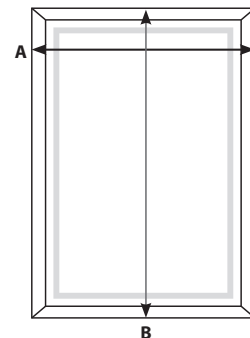

OUTSIDE MOUNTING (with no architraves)

For width 'A', measure the opening of the window and add 100mm to provide a fabric overlap of approx. 30mm each side.

For drop 'B', measure inside the window frame from one edge to the other in the centre. Add 100mm to this measurement to provide complete coverage of the window.

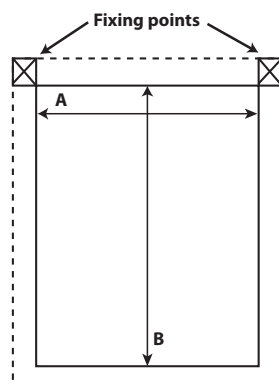


Custom Mounts

CORNER MOUNTING

For width of both blinds, measure from one edge of the casing to the other (see fig.1) Fill out separate column for each side.

Please nominate preferred blind to be shorter (see fig. 2) in the notes section.

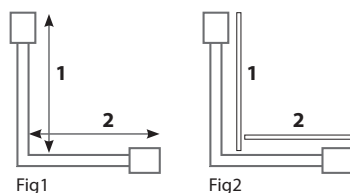

OVERSIZE WINDOWS

Specify in the 'Room' field on the order sheet 'Room (blind 1)' then repeat for additional blinds 'Room (blind 2)', 'Room (blind 3)' etc. Supply measurements for each blind together with the total width. Use notes section where needed.

NOTE: The middle blind must have a fixing point for the child safety device used to secure the chain.

